

# Pyure Mini® 25 & 50

## Quick Start Guide



### **Need Support?**

Contact our support team

+1 (877) 735-3701 sales@pyure.com

Treatment Range		
Pyure Mini 25	Pyure Mini 50	
80 - 250 sq ft (8 - 23 sq m)	250 - 500 sq ft (23 - 46 sq m)	
The table above summarizes the treatment area under typical operating conditions: 3 air changes per hour, 90% recirculated air, and 9 foot (2.7 m) ceiling. For use within the treatment range only.		


### **Safety First**

Check Power Source	Keep Away From Water and Wet Hands
To avoid fire or shock hazard, plug the purifier directly into a grounded AC electrical outlet.	<ul> <li>To protect against electrical hazards, DO NOT immerse in water or other liquids. DO NOT use near water.</li> <li>DO NOT plug the cord in with wet hands: electric shock could result.</li> </ul>
Place on a Clear, Hard, Flat Surface	Check for Damage
<ul> <li>Remove all packaging material before use.</li> <li>Keep the cord out of heavy traffic areas.</li> <li>NEVER block the air openings, grills/outlets or place on a soft surface such as a bed or sofa, as this could cause the unit to tip over, blocking the Air Intake Opening/Grill.</li> </ul>	DO NOT operate the purifier with a damaged cord or plug, if motor fan fails to rotate, after the purifier malfunctions, if it has been dropped or damaged in any manner. Return purifier to manufacturer or authorized repair facility for examination, electrical or mechanical adjustment, or repair.

**CAUTION:** for general ventilating use only. DO NOT use to exhaust hazardous or explosive materials and vapors.

#### **Instruction for Use**

- 1. Place the unit on a flat, level surface.
- 2. Plug the unit into a standard power outlet.
- 3. Press the opower button to start.
- 4. Use the / buttons to increase or decrease fan speed.
- 5. Use the button to dim the intensity of the blue light.\*
- \* LED light is aesthetic only and not the UV Optic.

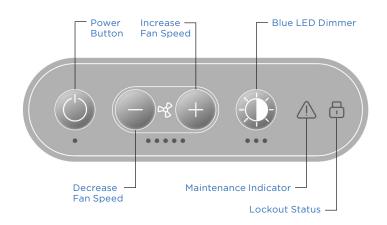

For the Owner's Manual, product warranty registration, and to order replacement parts, visit: www.pyure.com/owner or scan the QR code.

